



13p-DIN	color	SIGNAL	replacement 14p-Binder conn. pins	comment
1	brown	hi E1 string	P	hexaphonic (single string) outputs, hi E 1
2	blue	B	O	
3	gray	G	N	
4	orange	D	M	
5	pink	A	U	
6	purple	low E6 string	T	low E 6
7	gn	Gtr Signal	G	(grounded, if Mode-switch="Synth only")
8	yel-blk	synth (MIDI) Vol	E	(0..5V DC; grounded: MIDI Vol = off!)
9	yellow	special	J	GK-Mode-switch-control voltage
10	red	S1 Pgm Down	S	(Sw1, active low = grounded, when pressed)
11	wht-blk	S2 Pgm Up	R	(Sw2, active low = grounded, when pressed)
12	white	+ power (+7V)	A	
13	black	- power (-7V)	L	
Case contact		ground	C	(connect also to Binder CASE)

# WIRING Super Tele „Nelly the Telly“